


IMPORTANT

Do not supply compressed air, if the gun valve is not correctly installed on the machine

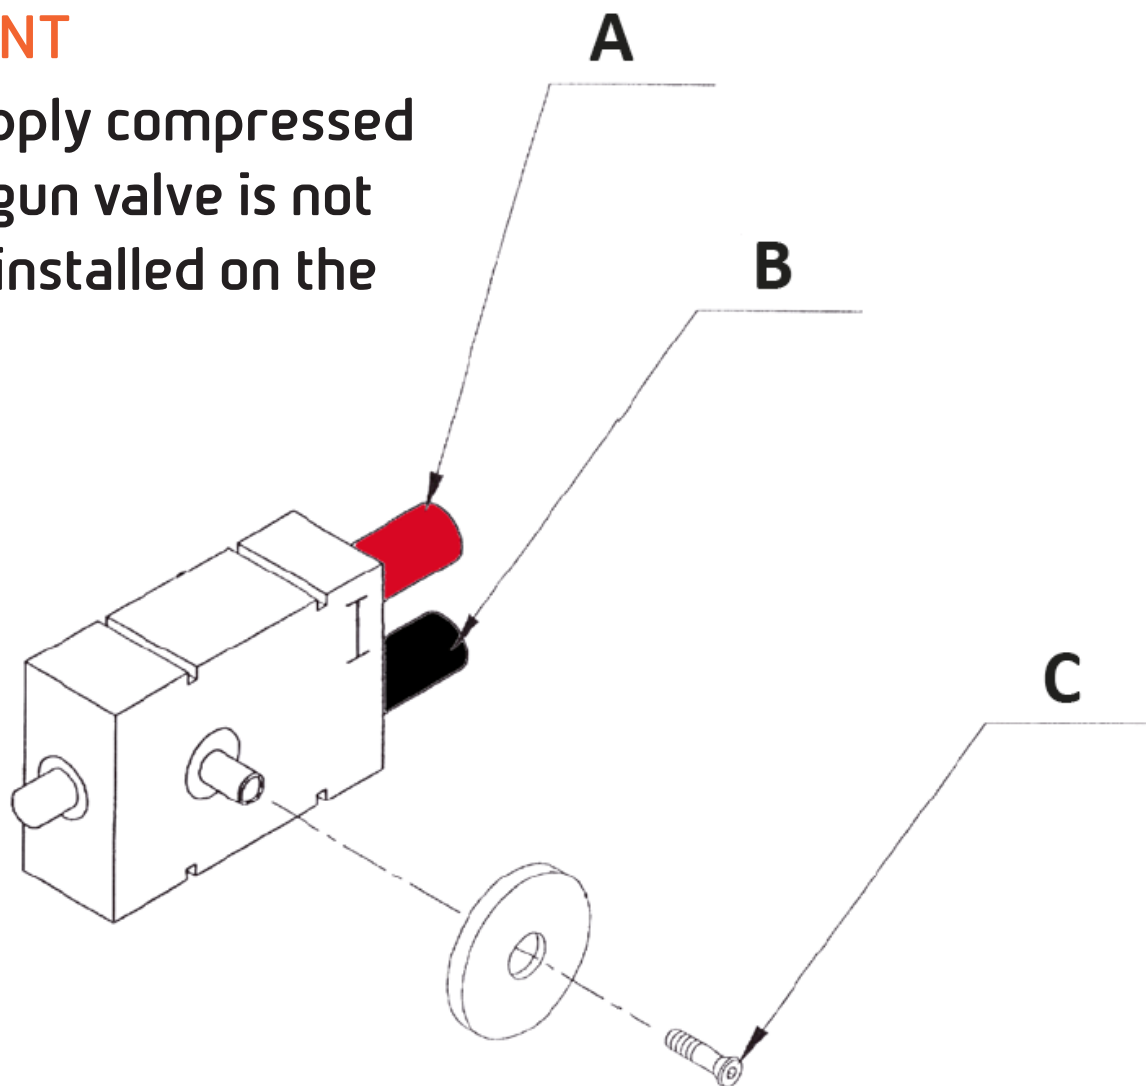

- A:** Insert red air control hose
- B:** Insert black air control hose
- C:** Use loctite 222 weak type on the screw